Title: DEVICE SWITCH ACTUATION

Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

1/7


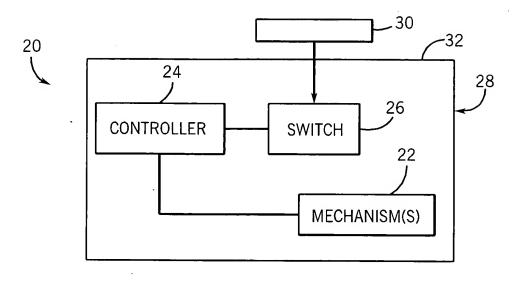



FIG. 1

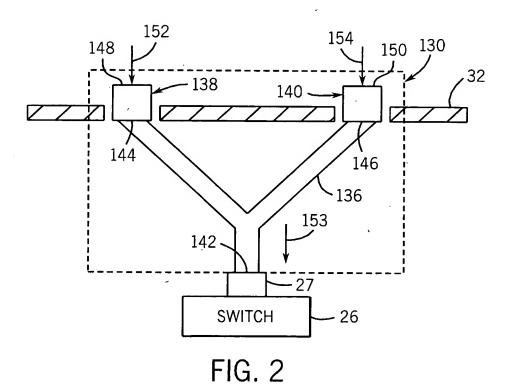

Title: DEVICE SWITCH ACTUATION

Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

2 / 7

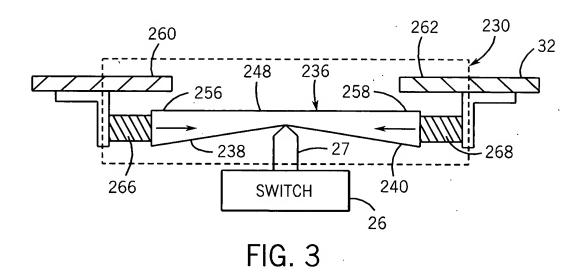


360 350 356 336 348 337 358 354 362 330 32 144 146 338 340 136 352 352 SWITCH 26


FIG. 4

Title: DEVICE SWITCH ACTUATION
Inventor(s): Richtsmeier et al.
DOCKET NO.: 200313857-1


3 / 7

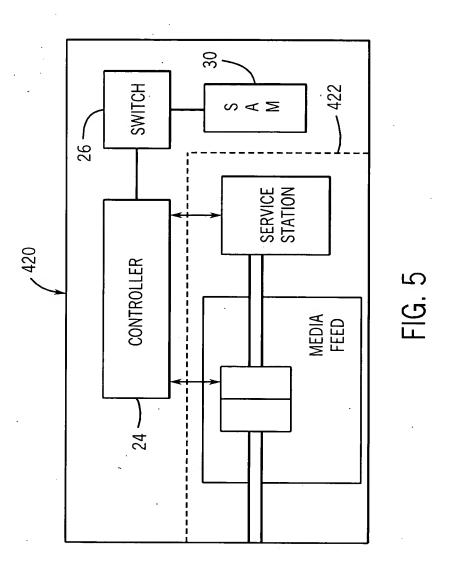

Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

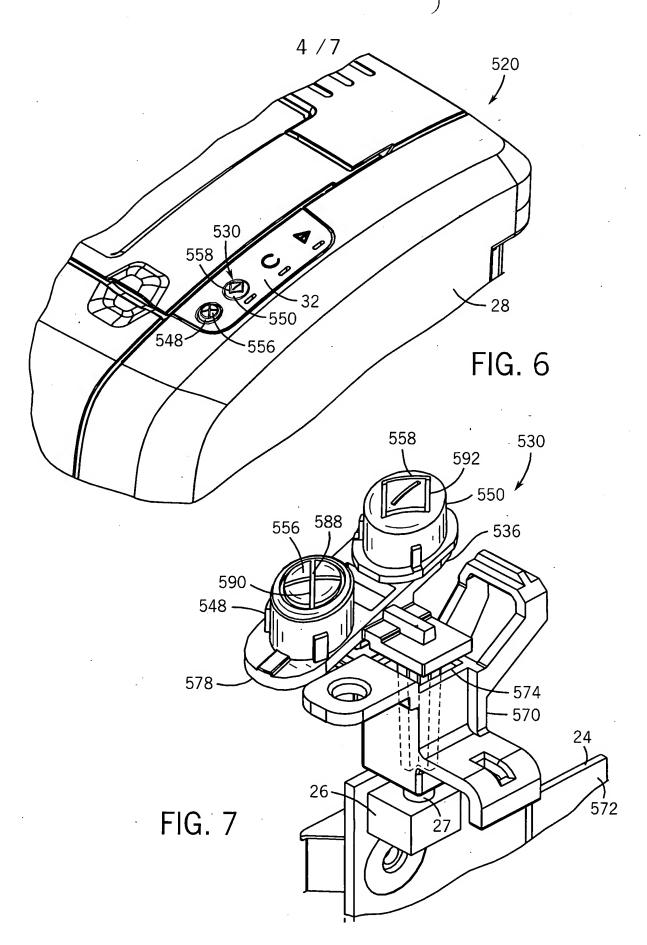


Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

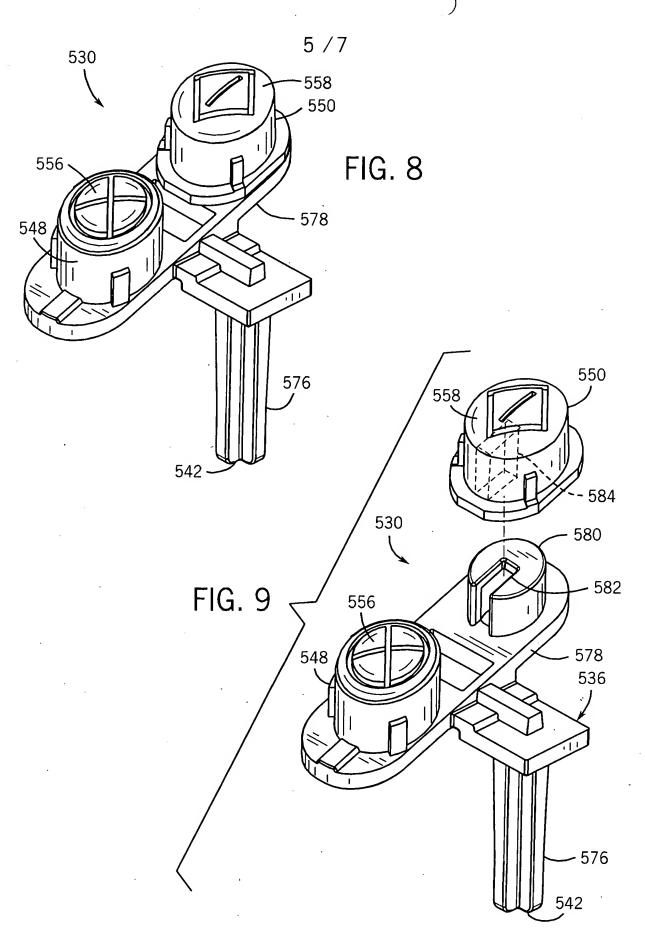

Title: DEVICE SWITCH ACTUATION

Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

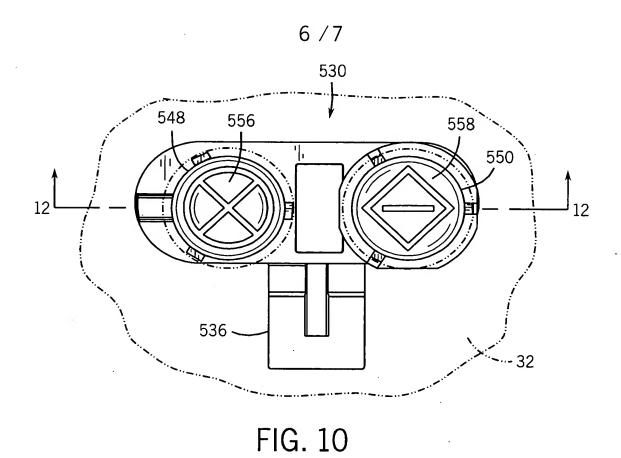

548 556 578 536 548 556 578 536 FIG. 11

Title: DEVICE SWITCH **ACTUATION**

